 





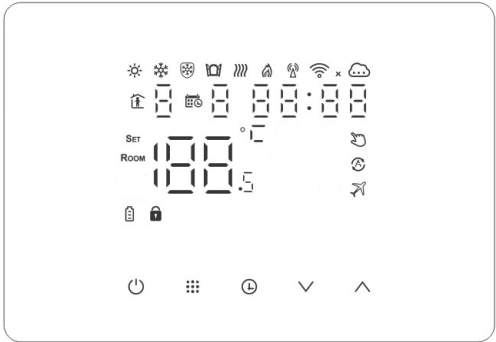
# F-ET10601/F-ET10602 WIFI Wireless Thermostat User Manual









 



- Download Smart Life or Smart RM app from Google play and app store.
- Turn on the thermostat, press and hold the key combination  and  to activate WIFI distribution network icon,  and  are blinking together

## Technical Data

 


 
 

 
 
 
 
 
 
 


 
 
- ☆ Power: USB power supply (TYPE-C)
- ☆ Display accuracy: 0.5°C
- ☆ Probe sensor: NTC(10k)1%
- ☆ Contact capacity: 5A/250V
- ☆ Working environment temperature: 0~70°C
- ☆ Range of temperature adjustment: 5~35°C
- ☆ Insulating condition: Normal environment
- ☆ Running program: Set per 1 week as a cycle
- ☆ Output: Switch relay
- ☆ Installation: Wall mounted or on battery seat
- ☆ Size(mm): 130\*90\*20

## Home Screen


 
 
 
 
 


-  Program mode;run preset program
-  Temporary manual mode
-  Manual mode
-  Holiday mode, Holiday days and temperature can be set to run in countdown mode
-  Heating icon, disappears to stop heating
-  WIFI connection, flashing EZ distribution mode
-  Child lock
-  Low power
-  WIFI status: Disconnection
-  Cloud icon: flashing AP distribution network mode
-  RF communication icon: It is always on display when it is normal, and it means communication is abnormal when it is flashing
-  Cooling mode,this icon is always displayed when switching to cooling mode and flashes when the cooling load is output

 


 


## Quick Operation

NO	Icon	Description
A		Turn ON/OFF
B		1 Short press  to switch programming mode and manual mode 2 Power on state, long press  for 3-5 seconds to do program mode setting 3 Power off state, long press  for 3-5 seconds to do advanced option A
C		1 Confirm key 2 Power off state, long press  for 3-5 seconds to do advanced option B 3 Power on state, long press  for 3-5 seconds to setting, short press  choose holiday mode, then “OFF” will flashing, press  or  change to “ON”, short  switch holiday days and holiday temp, then press  activate holiday mode.
D		1 Decrease key 2 Long press to lock /unlock keys
E		1 Increase key 2 On program mode state, press  ,  to enter into temporary manual mode 3 Long press to check external sensor temperature (only used for the receiver with external sensor)

## Time Setting


 
 

Power on state, press  to set minute. Second press  to set hour. Third press  to set week. Press   to change value. press  again to confirm.







## Holiday Mode Setting

Power on state, long press  for 3-5 seconds to setting, short press  choose holiday mode, then “OFF” will flashing, press  or  change to “ON”,short  switch holiday days and holiday temp, then press  activate holiday mode.





## Program Mode Setting

 

**6 times period setting: 5+2 days(factory default),6+1 days, 7 days**

Turn on thermostat, long press “” 3-5 seconds to do Program Mode Setting. Short press “” to switch and confirm. Press “” and “” to adjust value. After finish setting , stand for about 10 seconds ,it will save setting then exit .


 


 1		 2		 3		 4		 5		 6	
Wake up		Out door		Back home		Out door		Back home		Sleep	
6: 00	21°C	8: 00	17°C	11: 00	21°C	13: 30	17°C	17: 00	21°C	22: 00	17°C

Advanced Option A

Power off state, long press  for 3-5 seconds to do advanced option A. Short press  to switch and confirm. Press  and  to adjust options.  
After finish setting , stand for about 5 seconds ,it will save setting then exit .

NO	Setting Options	Data Setting Function	Factory Default
A1	Temp Calibration	-9-+9°C (Displayed as the corrected room temperature value)	-1°C
A2	Start/stop working temperature difference setting	0.5-2.5°C	1°C
A3	Child Lock	0:half lock 1:full lock	0
A4	Power on/off state memory after electricity cut	0:Thermostat on/off with memory when electrify 1:Thermostat off when electrify 2:Thermostat on when electrify	0
A5	Program mode type	0: 5+2 1: 6+1 2: 7 (every day was same)	0
A6	Setting temperature minimum limit	1-10°C	5°C
A7	Setting temperature maximum limit	20-70°C	35°C
A8	Low temperature protection	1-10°C When setting temp = 10°C, if press  will display <b>【--】</b> , cancel low temperature protection	5°C
A9	Standby bright	0: Off   1: Weakly bright   2:Half bright	2
AA	Window function triggers temperature	5-25°C,setting temperature is 10°C,decrease it ,will display <b>【--】</b> ,then canceled this function	--
AB	Window function running time	5-60min	15
AC	Factory defaults	Display Ao, long press  until show the whole screen	
AD	Mode select	0:Heating 1:Cooling	0

Advanced Option B

Power off state, long press  for 3-5 seconds to access advanced option B.  
short press  to choose the option, and adjust data by  or ,Remain about 5 seconds after finish setting will quit setting.

NO	Setting Options	Data Setting Function	Factory Default
CH	Select HY521 Zone Output	01~08	01
IP	IP address (Must be the same as HY521)	00~99	01